

# Mini Flow Gutter Instructions (Black or White)



500mm Maximum centres

Fix Gutter Support Clips & Joiners at a Maximum of 500mm centres using a string line. **A fall of 5.5mm per 2 mtrs is recommended, and an expansion gap of 4mm. Fix using 8x25 square drive stainless screws.**

Pack out if required the lower edge of the gutter bracket. Level the bracket with a wedge spacing it to a horizontal level or use a lower 8x25 screw as a packer to level.

**2.**




**4**



30mm overhang

**3**

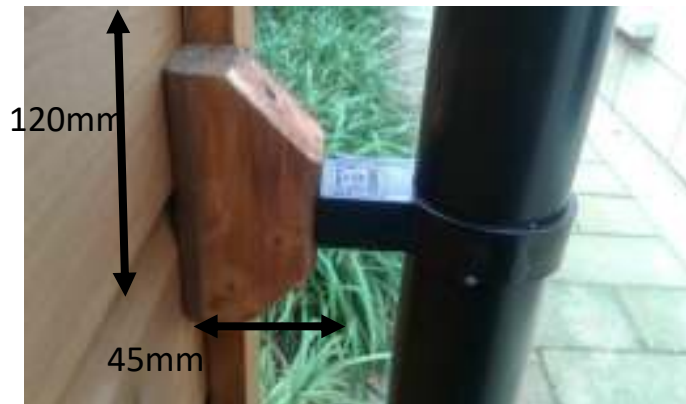

120mm

45mm

Using Slight downward pressure on the gutter, snap the front edge of the retaining clip over the front of the gutter.

**(Ensure that the marked 4mm expansion allowance is kept, see inside joiner & Rainheads). Use a spray on silicon spray to lubricate the gutter seals to ease fitting.**

You may require a small 120mm packer piece of the 45x28 Shed material to screw to the Shed wall on edge. Fix a Downpipe support bracket to this and clamp to the downpipe. One Bracket per Downpipe.



## Optional Water Tank Divertors

Water Diverters can be fitted into any downpipe. Pipe Supporting Clips should be used on Bends, Connectors and Divertoers where necessary. **The divertor will redirect water into the downpipe when the tank is full.**